

1/5


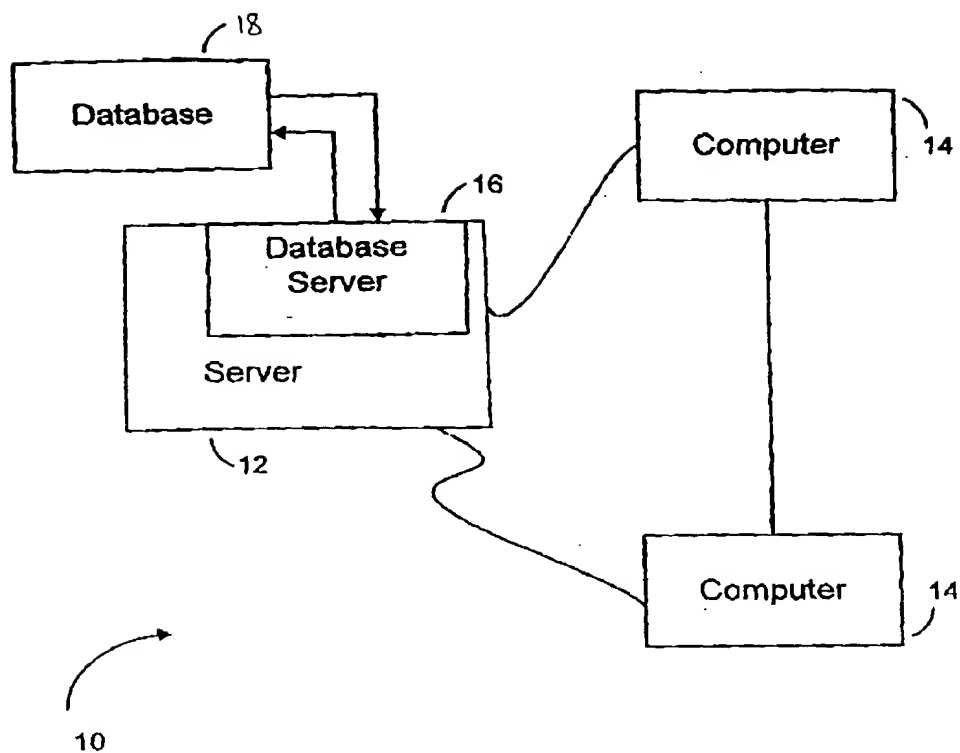


FIGURE 1

2/5

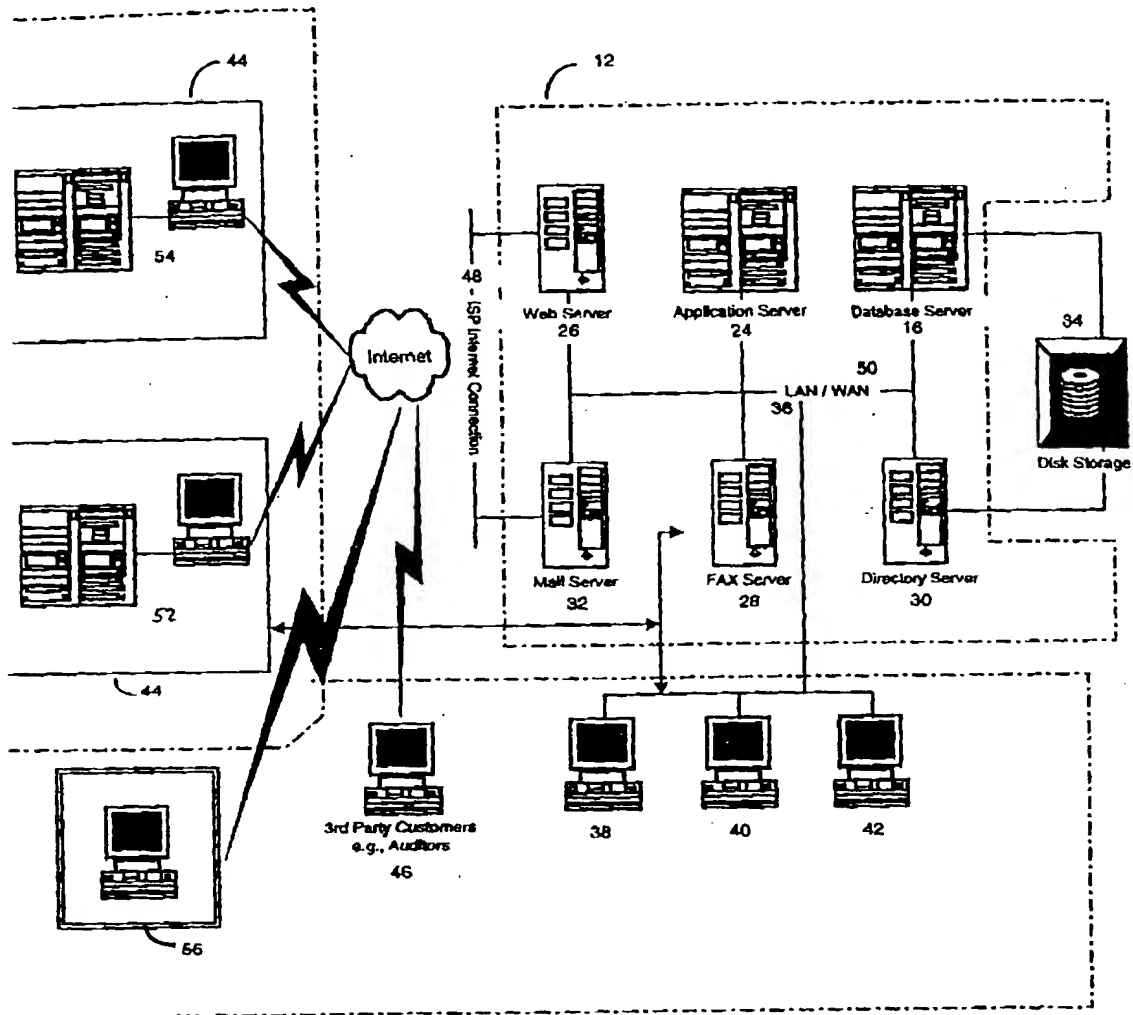


Fuel System
Fuel Pump

Location The pump is on the left side of the aft face of the accessory gearbox.

Identification The pump consists of a centrifugal boost element and two fixed-displacement high pressure gear elements. Includes the N2 speed sensor.

Purpose The pump provides sufficient fuel flow and pressure to meet engine burn flow requirements and flow for VGS actuators. The pump provides motive flow fuel back to the aircraft for ejector operation.

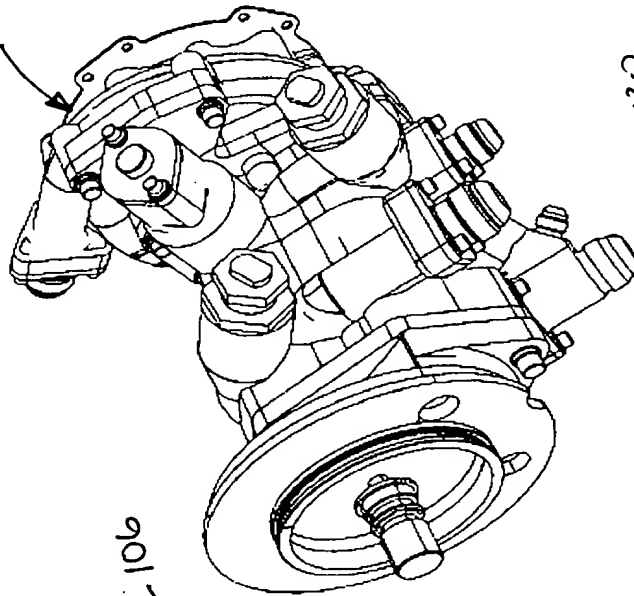

Termin

16

Chlorine

Next

Back


Animation

Men

122

221

415

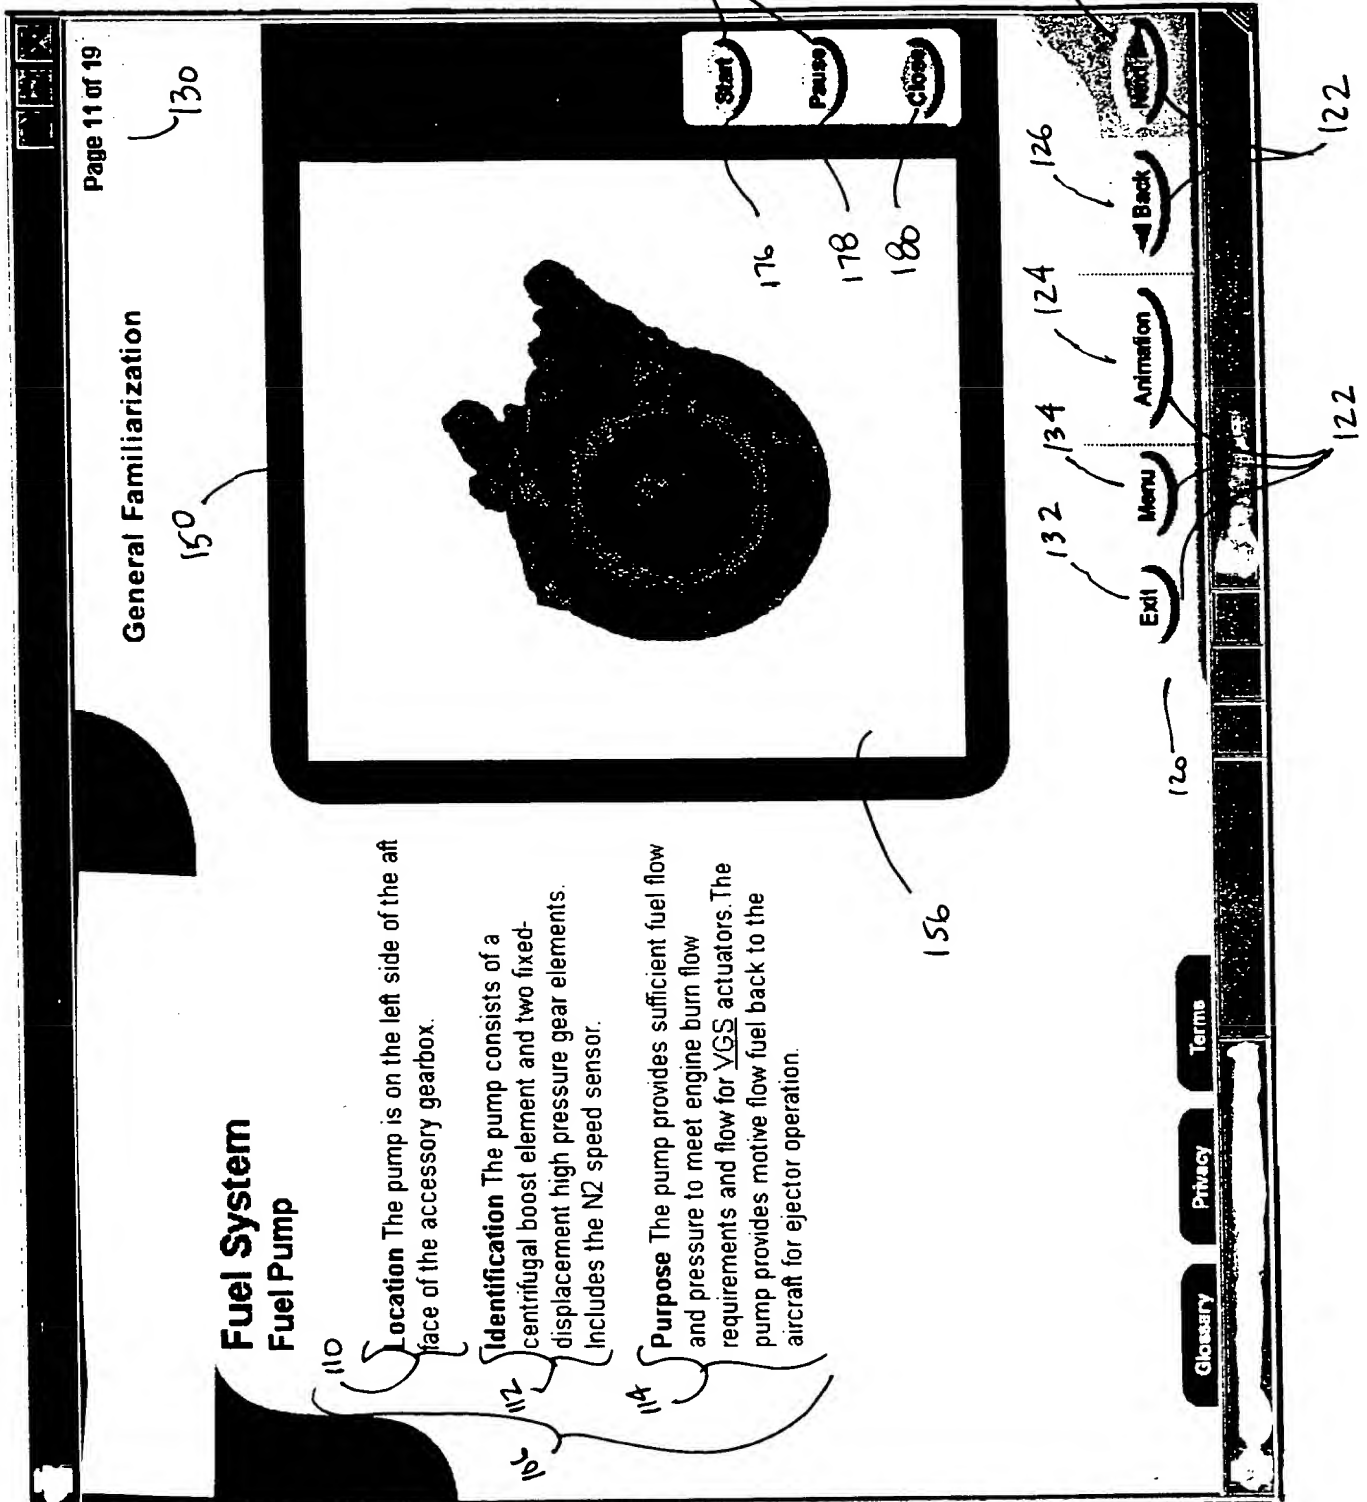

5/5

Figure 5

1000 900 800 700 600 500 400 300 200 100 0

160

152

152

152

152

152

156

